



Convertible Post Cap Light Installation Instructions



Note: The solar panel will need 24 to 48 hours of sunlight to fully charge. The amount of direct sunlight received by the solar panel determines the length of time the light will remain lit after dark.


To assemble your new Convertible Post Cap Light:

- Secure the post cap light base to the post by applying an exterior-grade construction adhesive to the underside of the base and placing the base firmly on the post.
- Attach the post cap light by pushing downward onto the base until the components are flush.
- Place the solar panel onto the top of the post cap light and push downward.
- Optional lighting method: Remove post cap light from base and place a tea candle onto base. Be sure to remove the solar panel for proper ventilation if using a tea candle. See Figure 1.



Easy to install

Apply an exterior-grade construction adhesive to the underside of post cap and place firmly on the post.

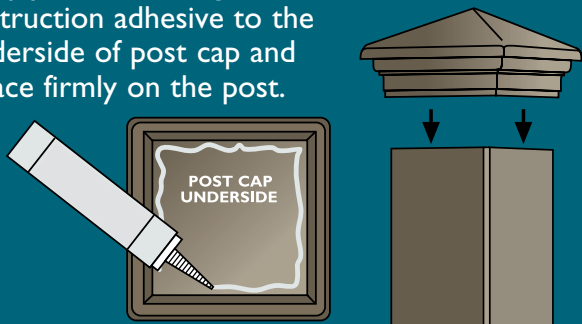

The post cap light may also be lit by a tea light candle. The solar panel must be removed when burning a tea light candle.